 


Four Input Audio/Video Selector with S-Video Inputs

You can use your RadioShack Audio/Video Selector to connect up to four audio/video components (such as direct-to-home satellite systems, VCRs, DVD players, laserdisc players, cable boxes, or video game systems) and multimedia speakers to a single TV. You can connect S-video cables directly to the selector for optimum picture quality.

Note: Depending upon your audio/video system setup, you might also need additional cables or adapters (available at your local RadioShack store) to connect all of the desired components.

Use phono cables to connect audio and video devices, and S-video cables to connect video devices to the selector.

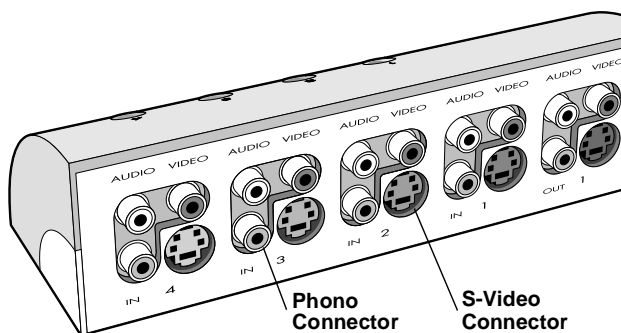

 
Note: To receive video output from the **OUT 1** S-video jack on the back of the selector, you must use an S-video cable to connect a video source to one of the **IN** S-video jacks.

PLACING THE SELECTOR


You can set the selector on just about any flat surface. For the best results, do not place it on top of a TV or other electrical appliance.

Important: If you place the selector on top of your TV, electromagnetic interference from the TV might distort the sound from any devices connected to the selector. If this happens, move the selector away from the TV.

CONNECTING DEVICES TO THE SELECTOR

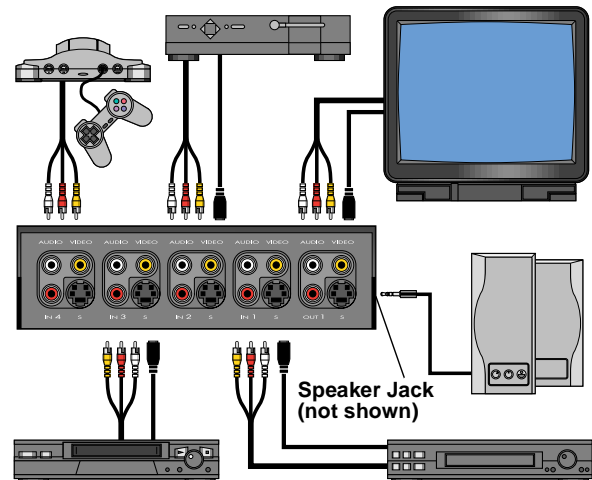


1. Connect the sound outputs for each device to a set of **IN AUDIO** jacks (1–4) on the back of the selector.
2. If a device you want to connect does not have an S-video cable, connect its video output to **IN VIDEO** for that device on the back of the selector. Or, if the device has an S-video cable, connect it to the S-video **IN VIDEO** jack for that device on the back of the selector.
3. If the TV or monitor you want to connect does not have an S-video cable, connect its video input to **OUT 1 VIDEO** on the back of the selector. Or, if it has an S-video cable, connect it to the S-video jack connector **OUT 1 VIDEO** on the back of the selector.
4. Plug a pair of multimedia speakers with an 1/8-inch (3.5-mm) plug into **OUTPUT 2** on the front of the selector.

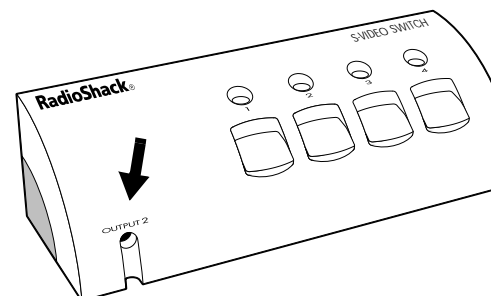 

USING THE SELECTOR

 Turn on the device you want to use. Press the button that corresponds to that device on the front of the Audio/Video Selector. The indicator turns on above the button you pressed. You should see the device's video output on the TV or monitor screen you connected to the selector. If you do not see video output for the device you selected, check to make sure you pressed the correct button and your input/output is properly connected.

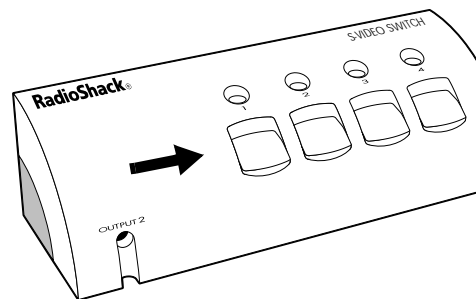

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

3/97

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102